

# LXW16 series micro-switch


## LXW16 系列微动开关

LXW16 series switch is apply to AC250 V controll circuit, used as master electrical appliance or fitting in other electrical appliance.

LXW16 系列微动开关适用于交流至 250V 的控制电路中，作为主令电器或者在其他电器中作为配件。

### ① The style sketch

#### 产 品 分 类

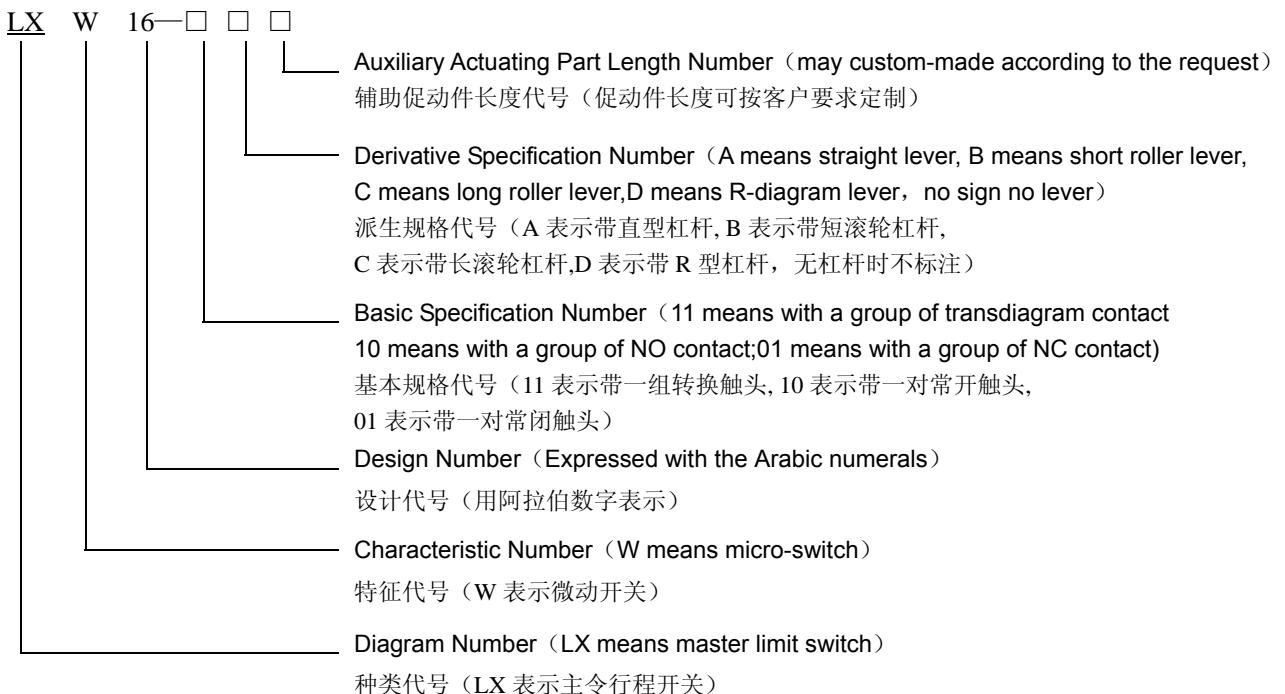

### ②specifcation

## 技术参数

<b>rated insulation voltage</b> 额定绝缘电压	380 V
<b>rated operational voltage</b> 额定工作电压	AC/DC 250V
<b>rated working current</b> 额定工作电流	AC 250V/16A DC 250V/0.3A
<b>power-frequency withstand voltage</b> 工频耐压	2000VAC
<b>contact resistance</b> 接触电阻	≤30 mΩ
<b>Electronic life(cycles)</b> 电气寿命 (次)	>100,000
<b>Mechanical life(cycles)</b> 机械寿命 (次)	>1000,000


## [③Authorization](#)

### 产品认证

CCC	VDE
Ith:16A	AC 250V 16A T85 μ
AC-12 250V 16A	
DC-12 250V 0.3A	

## [④Wiring diagram](#)

### 接线型式

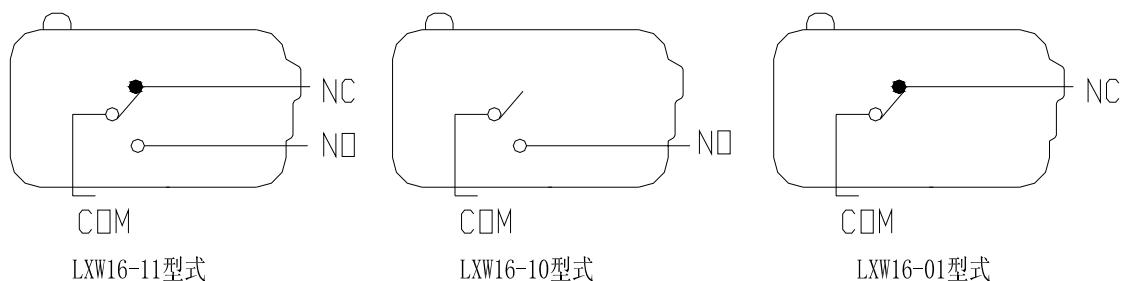


## ⑤Technical Specification


### 专用术语

	Force 力	动作力 OF Moves from the free position to the pull-up position must add to drive rod's strength
	释放力 RF Moves from the overall traveling schedule position to the reset position must add to drive rod's strength	
	动作行程 PT To pull-up position's migration is away from or the motion angle from drive rod's free position	
	超行程 OT To the overall traveling schedule position's migration is away from or the motion angle from drive rod's pull-up position	
	差行程 MD To reset position's migration is away from or the motion angle from drive rod's pull-up position	
	全行程 TT To the overall traveling schedule position's migration is away from or the motion angle from drive rod's free position.	
	释放行程 RT The button returns to the displacement in position to be away from (angle) to the free position migration	
	自由位置 FP Without when the rate of head movement drive rod's position	
	动作位置 AP The drive rod receives the external force, the movable contact happen to starts from the free position condition to reverse the time drive rod's position	
	释放位置 RP Reduces on drive rod's external force, the movable contact happen to starts returns to when the free position condition drive rod's position from the pull-up position condition	
	全行程位置 TPP The drive rod arrives at when the transmission stop position drive rod's position	

## ⑥Terminal diagram



### 接线端子形式

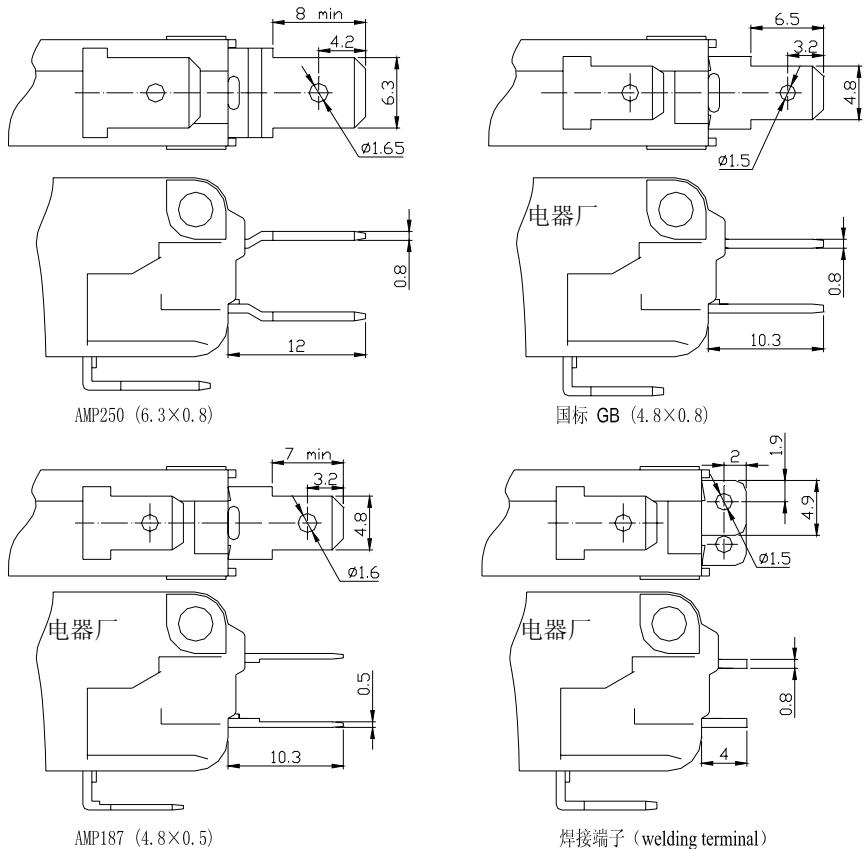

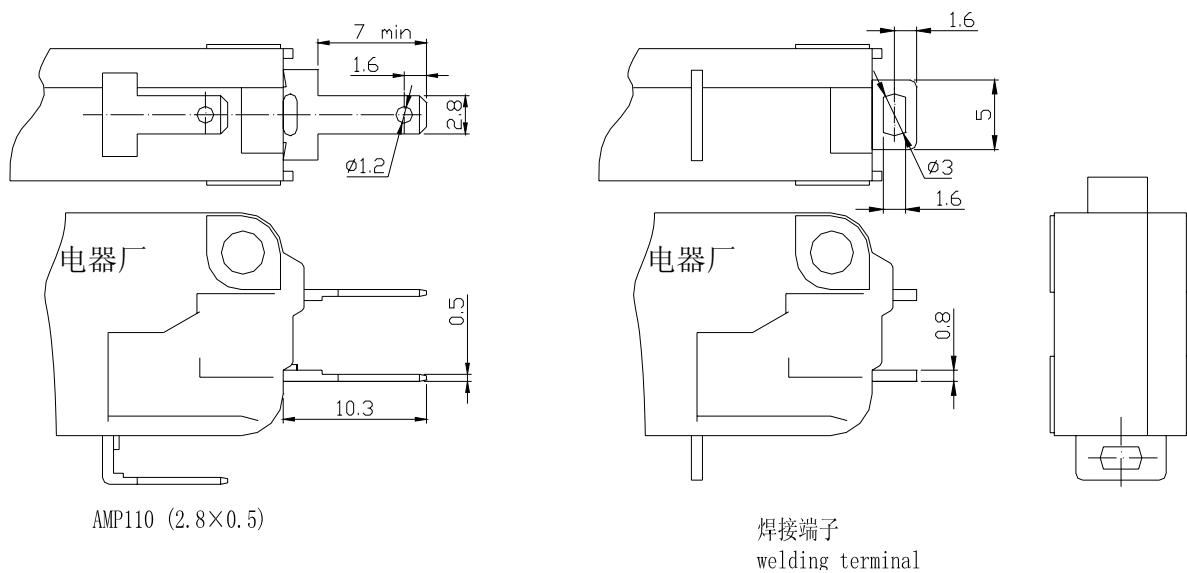

### ⑦DIMENSIONS AND FIXING SIZE

#### 外形与安装尺寸

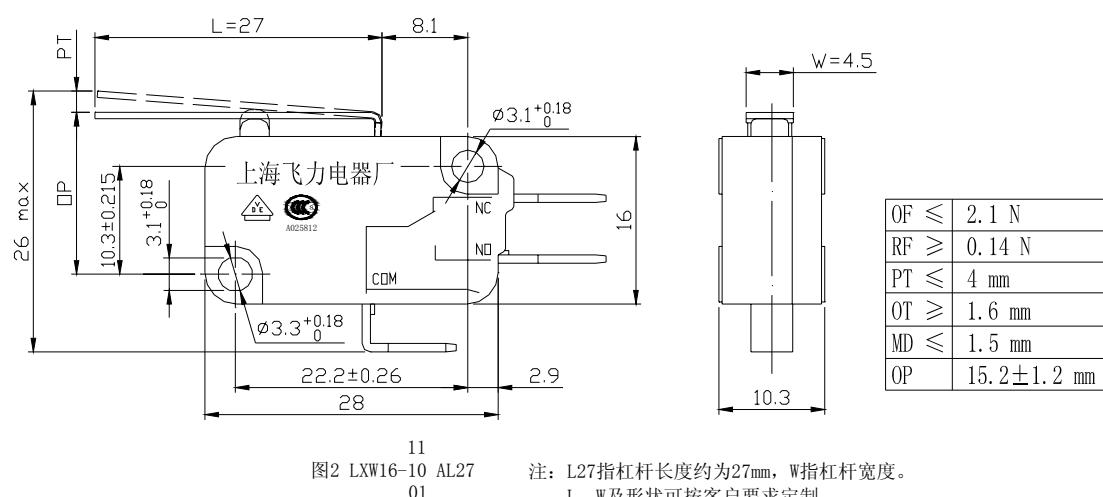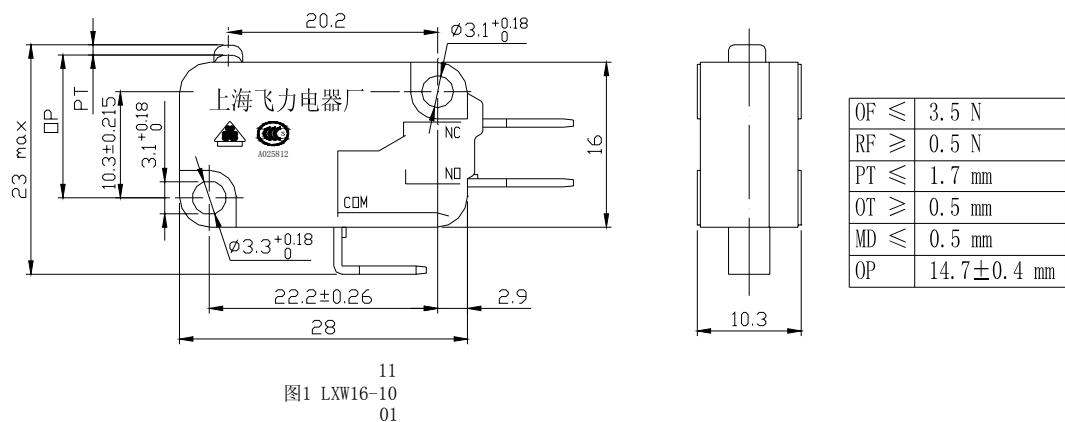

注: L27指杠杆长度约为27mm, W指杠杆宽度。

L、W及形状可按客户要求定制

note:L27 means the length of lever is 27mm,w means the width.The size of L&w can be custom-made

